


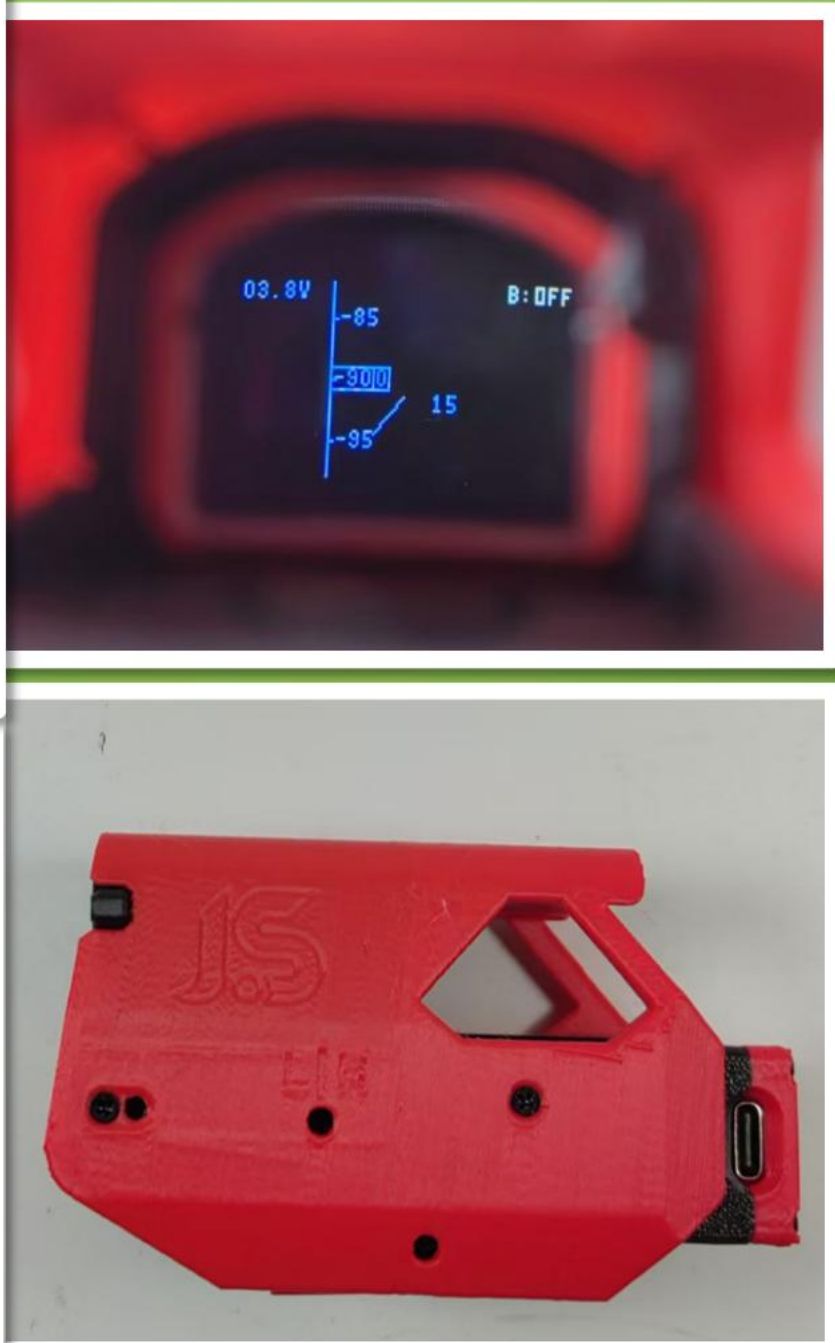


Function:
The head-up display system
Built-in 6-axis attitude sensor
Built-in Bluetooth BLE
Display content:
Horizontal angle
Dip angle
Remaining ammunition *
Empty position tips *
* The cartridge detection module needs to be installed or passed
Bluetooth connection to the JS-C01 speedometer or
Connect to the JS Bluetooth fire control

Built-in battery: 400 mah
Full-power working time > 3h
Charging time: ~1h

Notice:
System will Automatic shutdown when the voltage is below 3.4V to protect battery.

shop124370040.taobao.com 杰世玩具黑科技

Instructions

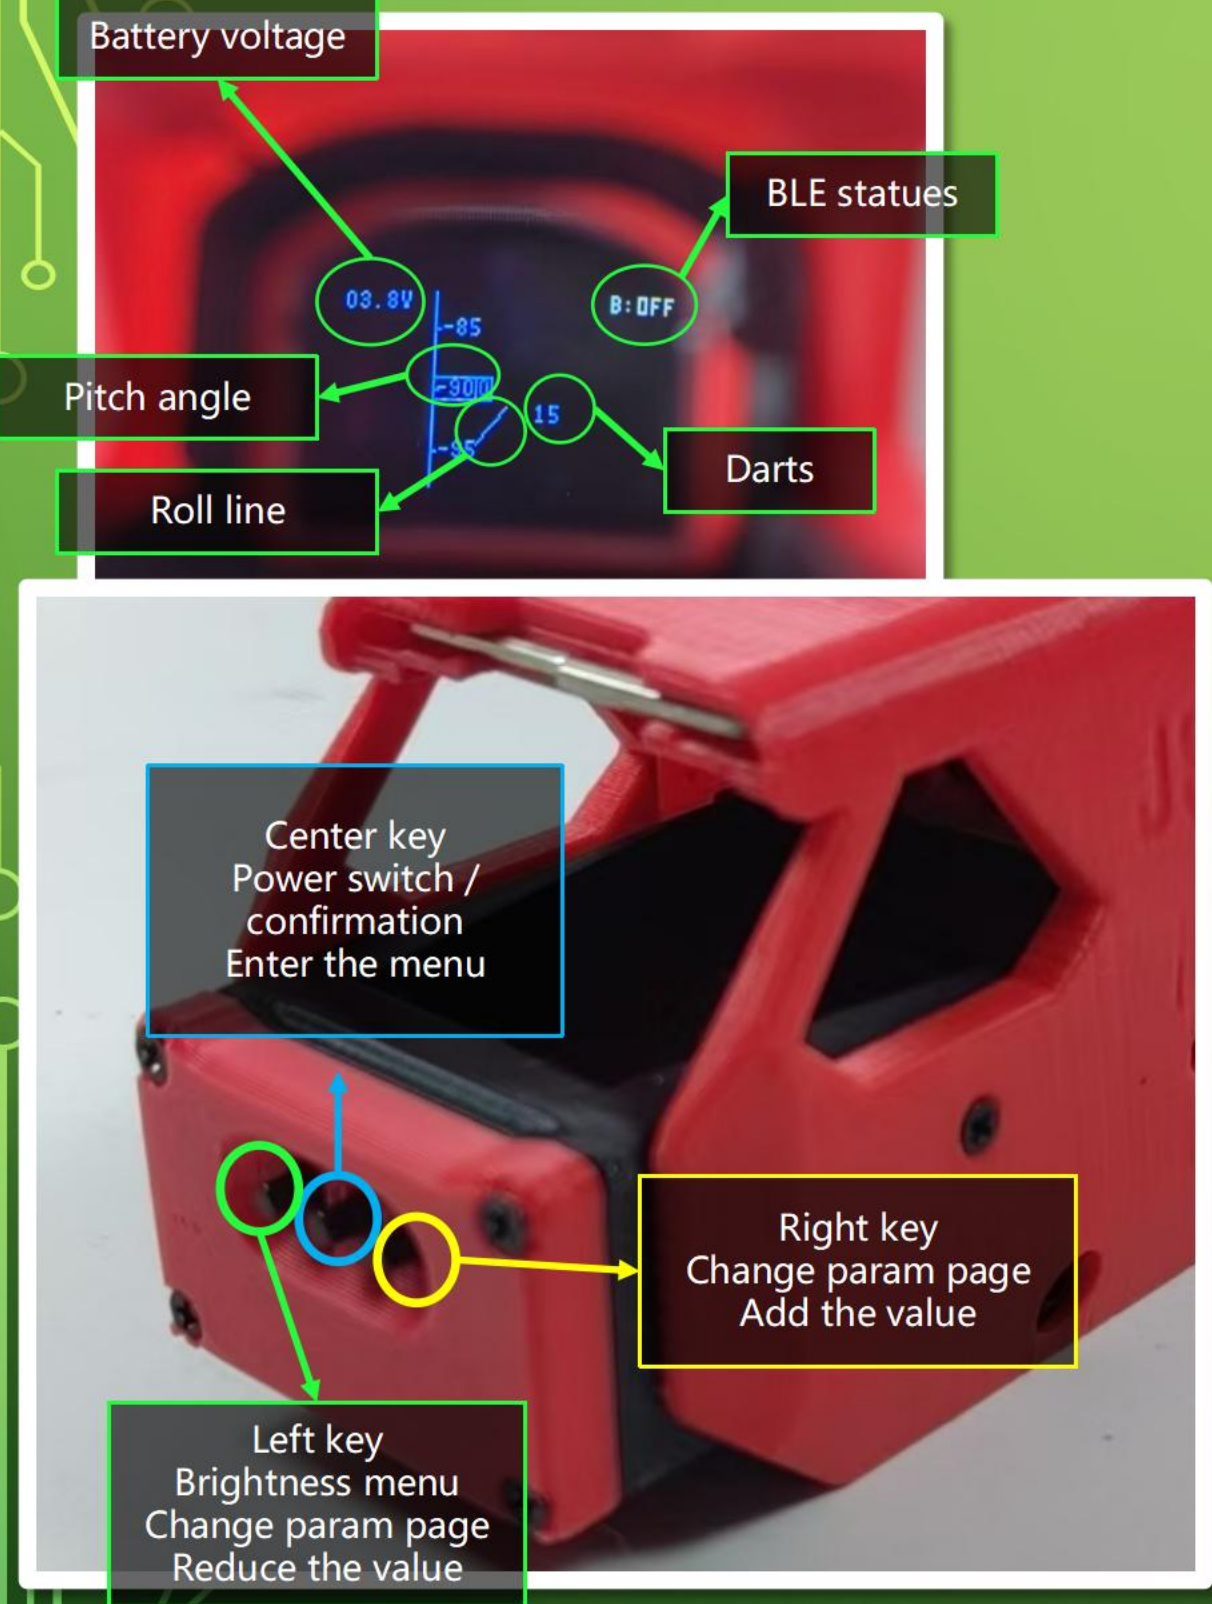

Operation declaration:
Center key:
Power ON/OFF:
Press and hold 1 second / 5 seconds.

Enter the settings at the main interface:
Double click:??
Three clicks: Turn the Bluetooth on or off
Four clicks: Set the name of the connected Bluetooth device
Five hits: Enter the param menu

In other interfaces:
One click: Switch between page turning and setting the parameter values
Double click: Save the parameters and return to the main interface.

Brightness menu:
Double click: Save the brightness and exit

X-Y offset menu:
One click: Selset X/Y
Double click: Save the brightness and exit

Left key:
At the main interface:
One click to Enter the Brightness Menu
In other interfaces: reduce the value /change param page

Right key:
At the main interface:
Double click to Enter the X-Y Offset Menu(-20~+20 offset)
In other interfaces: add the value / change param page

shop124370040.taobao.com 杰世玩具黑科技

Param Description


menu	The parameter name	function	unit	Windows default
Param menu	MAGAZINE NUM	Darts per magazine	/	15
	AUTO OFF	Auto shutdown time when unused	min	10
	DISPLAY DARTS	Darts display on/off	/	ON
	DISPLAY PITCH	Pitch angle on/off	/	ON
	DISPLAY ROLL	Roll line on/off	/	ON
	UI COLOR R	Interface Color (red 0~31)RGB565	/	0
	UI COLOR G	Interface Color (green 0~63)RGB565	/	42
	UI COLOR B	Interface Color (blue 0~31)RGB565	/	31
	S COLOR R	S color (red 0~31)RGB565	/	0
	S COLOR G	S Color (green 0~63)RGB565	/	42
	S COLOR B	S Color (blue 0~31)RGB565	/	31
	PITCH OFFSET	Pitch offset value	degree	0
	ROLL OFFSET	Roll offset value	degree	0
	EMPTY VALUE	Empty warehouse valve value	/	200

shop124370040.taobao.com 杰世玩具黑科技

How to adjust



Note: Unscrew one side in the order, then tighten the screw on the other side!!
The HUD may be be damaged if tightening too much!

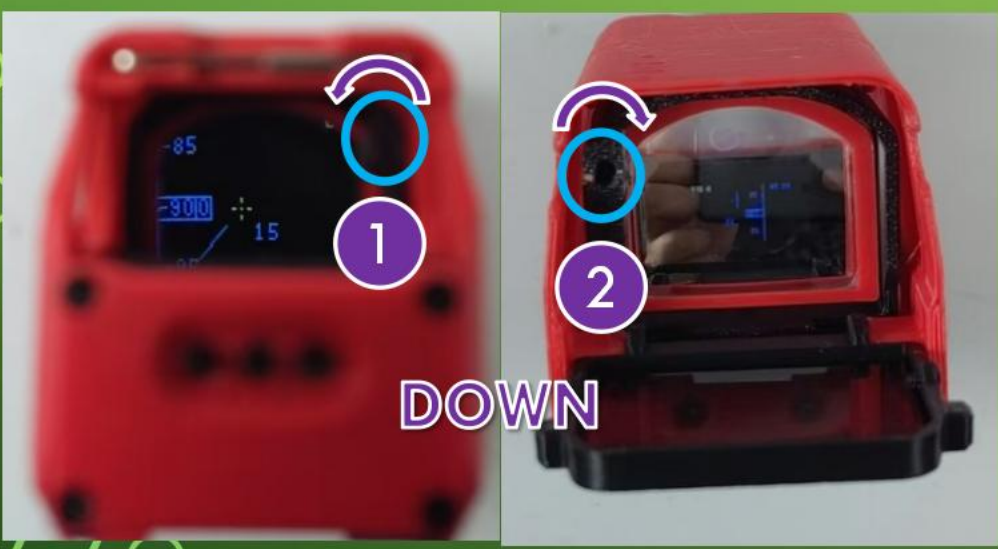

shop124370040.taobao.com 杰世玩具黑科技

Firmware Upgrade Guide




0. Turn off the HUD.
1. Prepare a USB-TYPEC data cable and plug it into the computer.
2. Connect the USB cable to HUD then press center key.
3. There will be a U disk "JS IAP" ,and a file Ready.txt.



4. Copy the frameware file BLE_HUD.bin to this U disk.



5. System will reset the U disk after file copy,and there will be a file SUCCESS.txt. It means upgrade is successful.

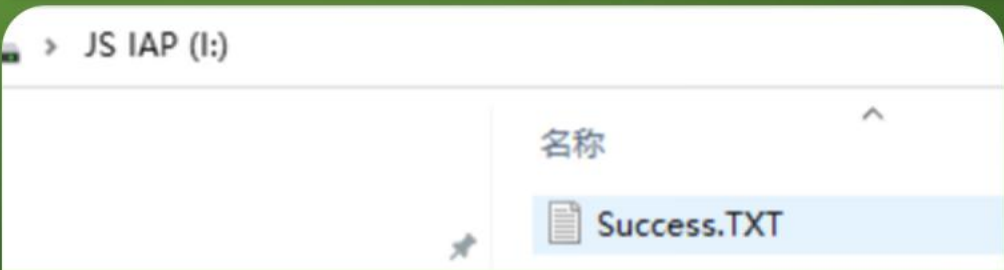

shop124370040.taobao.com 杰世玩具黑科技